


Digging **Up To** a Stobie pole (but not past)

Excavations can occur up to 350mm wide and up to 600mm deep when digging up to a Stobie pole. If digging past a Stobie pole, please refer to the '*Digging Past a Stobie Pole*' section. Excavations up to Stobie pole that are wider than 350mm or deeper than 600mm fall within the exclusion zone and require written authority from SA Power Networks through the 'Request for network access' page on SA Power Networks' website.

Note – this information is not relevant for digging **past a Stobie pole.**

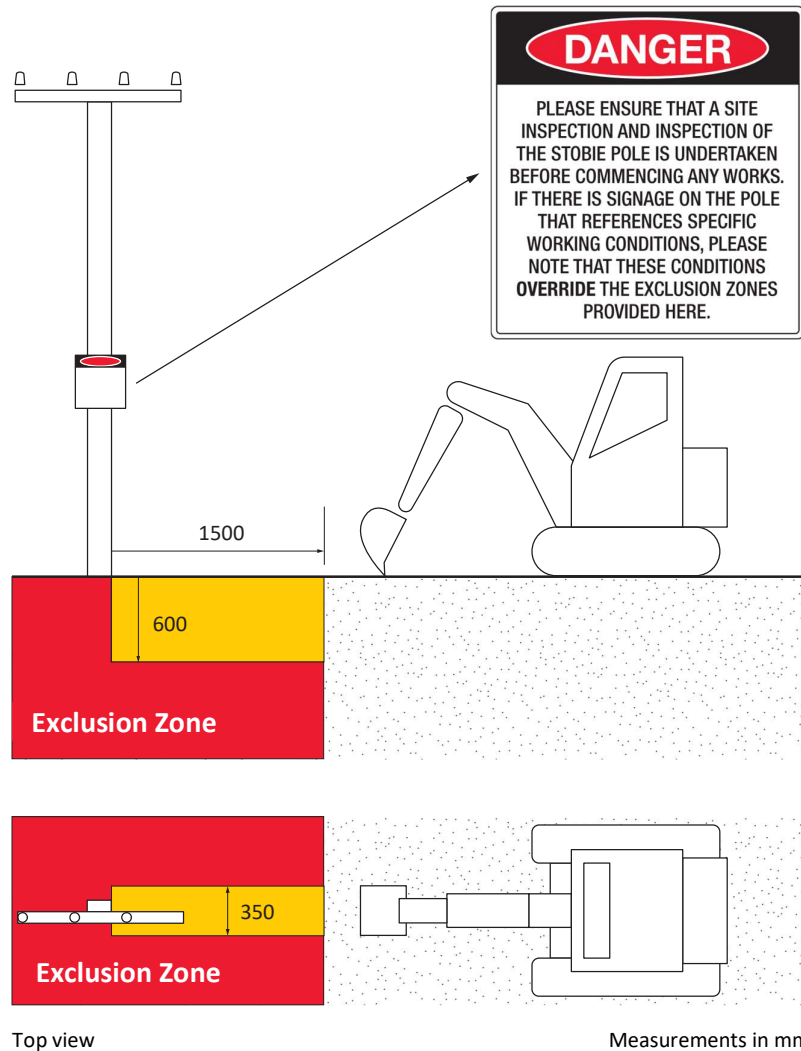


Due to the schematic nature of this user guide, the positions and equipment shown are indicative only and shall be verified on site

Digging Past a Stobie pole

The below table defines the maximum allowable excavation depth, in the following distance zones measured from the face of the pole. If these zones are being breached, written authority must be granted by SA Power Networks, which can be organized by submitting a request through the 'Request for network access' page on SA Power Networks' website:

Distance from face of pole	Allowable excavation depth
0 to 1500	300
1500-2000	600
2000-3000	1000
>3000	No restriction

Note – this information is not relevant for digging up to a Stobie pole.

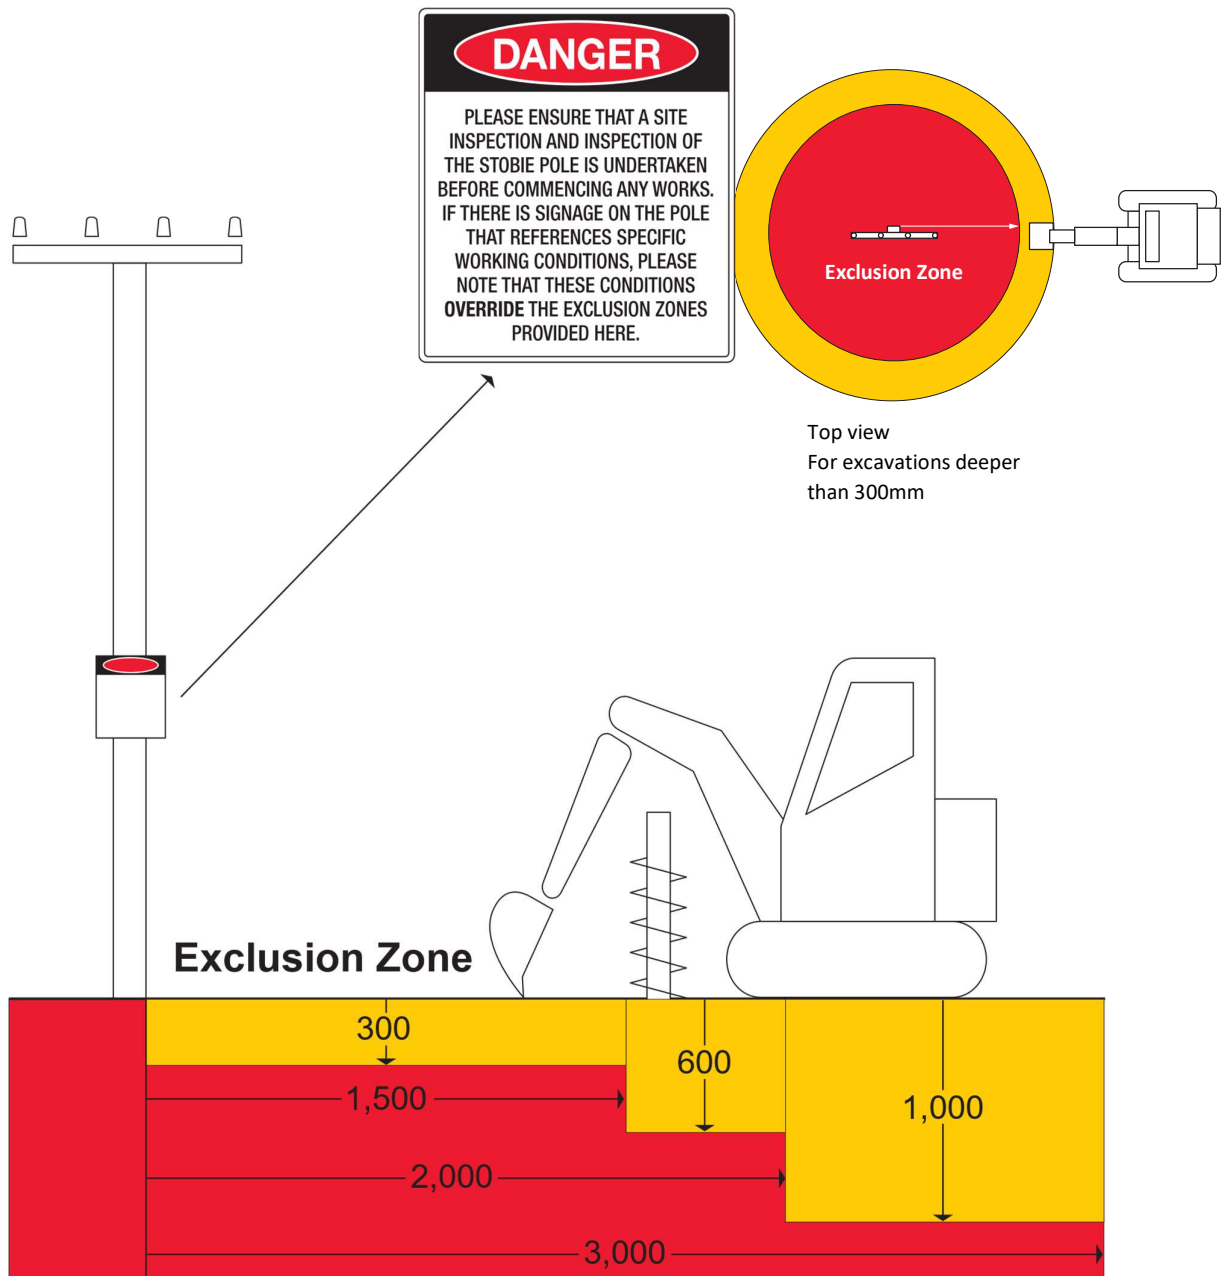

Due to the schematic nature of this user guide, the positions and equipment shown are indicative only and shall be verified on site